

PARTS INCLUDED WITH THE "INTREPID SLING"



RECTANGULAR LOOPS




WIDEMOUTH SLIPLOCK


REAR STOCK ATTACHMENT FOR M-4 STYLE STOCKS



MAIN BODY OF THE INTREPID SLING

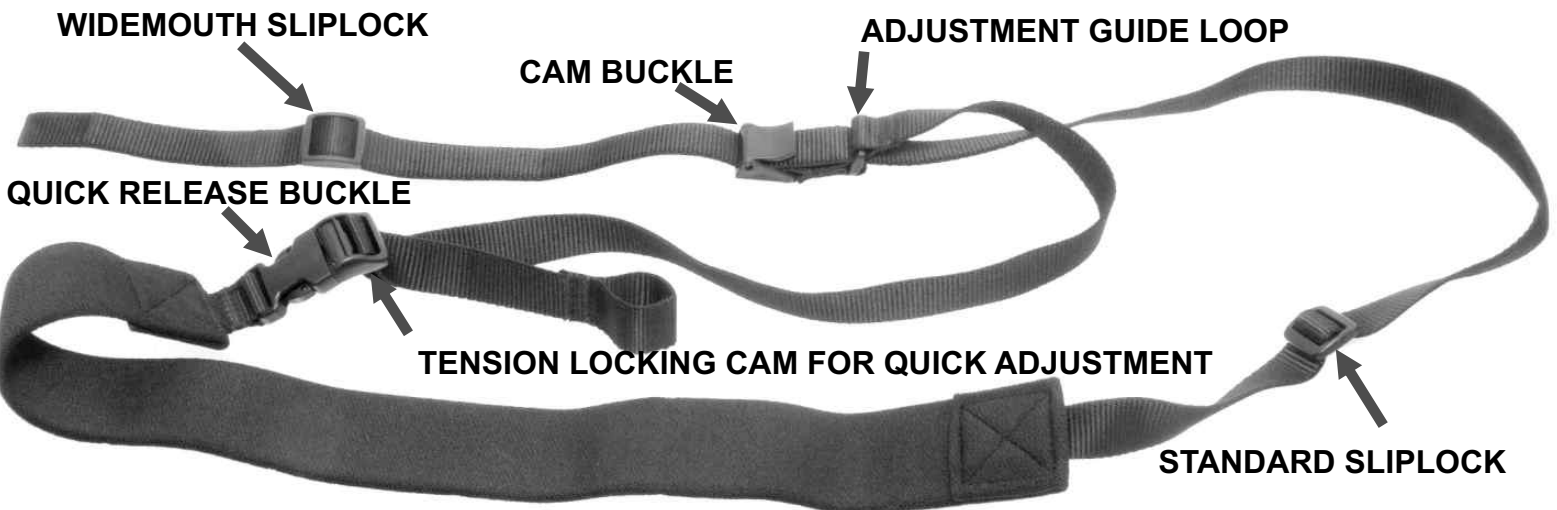

- 1.) FIT THE FIXED STOCK ADAPTER AROUND THE END OF THE BUTTSTOCK.
- 2.) RUN THE LOOSE END OF THE WEBBING THROUGH THE RECTANGULAR LOOP.
- 3.) SLIDE THE WIDEMOUTH SLIPLOCK AS NECESSARY TO PULL THE WEBBING TIGHT AND THEN WEAVE THE WEBBING BACK THROUGH THE SLIPLOCK.
- 4.) BRING THE LOOSE END OF THE WEBBING OVER THE BOTTOM EDGE OF THE SLIPLOCK AND UNDER THE TOP EDGE OF THE SLIPLOCK.
- 5.) TRIM EXCESS WEBBING AND MELT THE END TO KEEP IT FROM FRAYING.

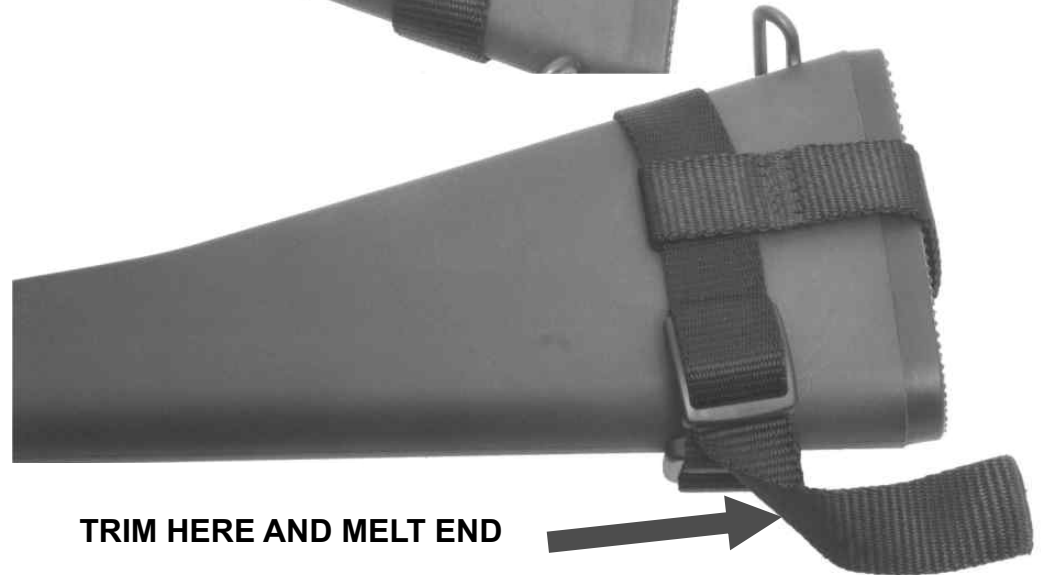


TRIM HERE AND MELT END

- 1.) THE LONG PIECE OF WEBBING ON THE MAIN BODY OF THE SLING MUST HAVE THE CAM BUCKLE AND WIDEMOUTH SLIPLOCK REMOVED.
- 2.) THE LOOSE END OF THE WEB IS RUN THROUGH THE SECOND RECTANGULAR LOOP.
- 3.) THE STANDARD SLIPLOCK IS USED FOR LENGTH ADJUSTMENT ONLY.



- 1.) FIT THE M-4 STOCK ADAPTER THROUGH THE HOLE PROVIDED AT THE END OF THE STOCK.
- 2.) SLIDE THE SLIPLOCK AS NECESSARY TO PULL THE WEBBING TIGHT.
- 3.) BRING THE LOOSE END OF THE WEBBING OVER THE TOP EDGE OF THE SLIPLOCK AND UNDER THE BOTTOM EDGE OF THE SLIPLOCK.
- 4.) TRIM EXCESS WEBBING AND MELT THE END TO KEEP IT FROM FRAYING.

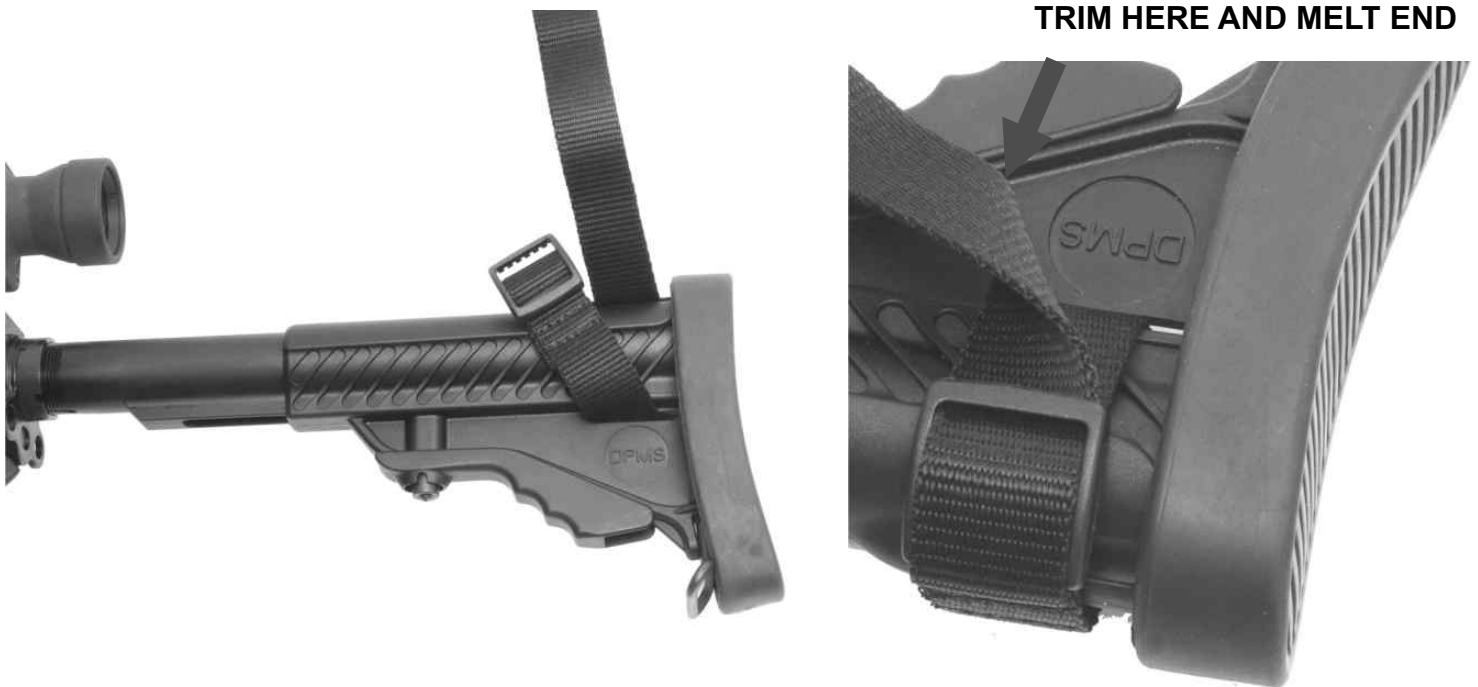

- 1.) THE LONG PIECE OF WEBBING ON THE MAIN BODY OF THE SLING MUST HAVE THE CAM BUCKLE AND WIDEMOUTH SLIPLOCK REMOVED.
- 2.) THE LOOSE END OF THE WEB IS RUN UNDER THE WEBBING LOOP BETWEEN THE WEBBING AND THE STOCK.
- 3.) THE STANDARD SLIPLOCK IS USED FOR LENGTH ADJUSTMENT ONLY.



- 1.) AFTER PASSING THROUGH THE LOOP AT THE END OF THE BUTTSTOCK, THE LOOSE END OF WEBBING IS EXTENDED DOWN THE SIDE OF THE WEAPON AND GOES THROUGH THE CENTER OF THE ADJUSTMENT GUIDE LOOP.
- 2.) THE WEBBING THEN PASSES THROUGH THE CAM LOCK AND EXTENDS TOWARD THE BARREL END OF THE WEAPON.



THERE ARE MANY WAYS TO ATTACH THE INTREPID SLING TO THE FRONT OF A WEAPON. THERE ARE MANY AFTERMARKET ACCESSORIES THAT WILL ALLOW VARIOUS WAYS OF ATTACHING THE FRONT OF THE SLING THAT BEST SUIT THE SHOOTER. SOME WEAPONS COME WITH A SWIVEL LOOP ALREADY ATTACHED. SOME WEAPONS HAVE A SWIVEL BASE PRE-MOUNTED FROM THE FACTORY.

THESE DIRECTIONS DESCRIBE THE ATTACHMENT TO A WEAPON THAT HAS NO PROVISION FOR DIRECTLY MOUNTING A SLING PROVIDED.

- 1.) BE SURE THE FRONT WIDEMOUTH SLIPLOCK IS PLACED ON THE LOOSE END OF THE WEBBING JUST IN FRONT OF THE CAM BUCKLE.**
- 2.) RUN THE LOOSE END OF WEB AROUND THE OUTSIDE OF THE REAR FRONT SIGHT POST AND COME BACK THROUGH THE CENTER OF THE SIGHT.**
- 3.) FEED THE LOOSE END OF THE WEBBING BACK THROUGH THE WIDEMOUTH SLIPLOCK.**
- 4.) BRING THE LOOSE END OF THE WEBBING OVER THE REAR EDGE OF THE SLIPLOCK AND UNDER THE FRONT EDGE OF THE SLIPLOCK.**
- 5.) TRIM EXCESS WEBBING AND MELT THE END TO KEEP IT FROM FRAYING.**



TRIM HERE AND MELT END



THE POSITION OF THE ADJUSTABLE SLIDE ON THE SLING CAN BE ADJUSTED BY OPENING THE TOP LEVER OF THE CAM BUCKLE AND SLIDING THE CAM BUCKLE AND ADJUSTABLE SLIDE LOOP ASSEMBLY UP OR DOWN THE LENGTH OF THE SLING.



THE OVERALL LENGTH OF THE SLING CAN BE ADJUSTED SHORTER BY PULLING ON THE ADJUSTMENT TAIL JUST BELOW THE CAM LOCK.



TO LENGTHEN THE SLING, USE YOUR THUMB TO RELEASE THE TENSION LOCK AND PULL THE WEBBING FROM THE BOTTOM.

